

E-Classroom Control Panel Reference Atwater Kent 227

TURN PROJECTOR ON/OFF

- On the Extron System 7SC control panel, to turn the LCD projector on or off, hold down the green "POWER" button for at least two seconds, then release it.
- If the power button is flashing, then the projector is in the process of powering up or shutting down. The image may not immediately appear or disappear, and you cannot turn the system off or on again when the button is flashing.

LOWER PROJECTION SCREEN

- The buttons to lower/raise the projection screen are located on the right side wall out front, to the left of the Extron SCP250 wall interface.

SELECT PROJECTION SOURCE

- To select a projection source, press the input button which is depicted or written that you want to project. (i.e. PC, VCR, Laptop)
- If you are using a laptop (Input 7), you will need to connect one end of a 15 pin VGA cable into the Input 7 port on the front of the Extron control panel, and the other end to the back of your computer.
- The Input 7 port will also allow you to display an external device such as a document camera by connecting the cables to the front of the panel.

AUTO IMAGE

- If after you have pressed the desired input button and no image appears, or part of the image is cut-off on the screen, press the blue AUTO-IMAGE button to re-set the image.

PLAY A VIDEOTAPE

- To play a videotape, make sure that the VCR input button is selected on the control panel and that power to the VCR is on.
- Insert the VHS tape into the VCR and press PLAY.
- You can adjust the audio level by turning the volume knob.

ADJUST VOLUME

- To adjust the volume, turn the knob located at the far right side of the panel, to the desired level. The green LCD display will show the levels (MIN – MAX).
- The yellow "MUTE" button not only mutes audio, but also blacks out any video being shown from the projector.
- This volume control does not control the volume of the wireless microphone.

WIRELESS LAVALIERE MICROPHONE

- Clip-on the lavalier microphone to your shirt, blouse, or tie at a distance of approximately 6 - 8 inches below your mouth.
- Turn-on the ON/OFF switch on the microphone transmitter and begin speaking.
- To adjust the volume, turn the LEVEL knob on the microphone receiver that's mounted below the Extron control panel, in the closet.

When finished with the room, please turn off the projector and log off of the computer (no need to shut it off). If you need help or have further questions, please call the ATC at (508) 831-5220.